


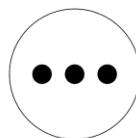
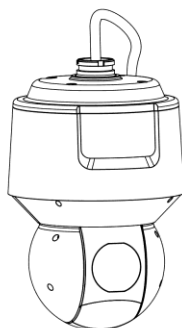
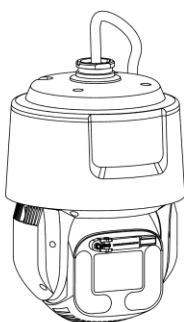
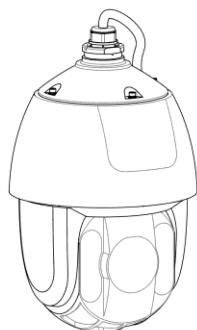
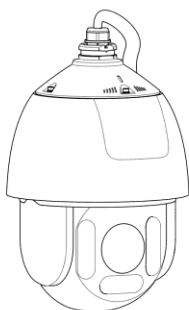
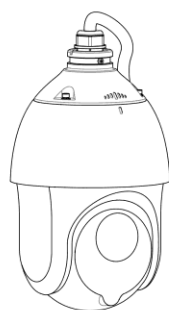
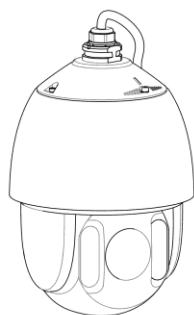


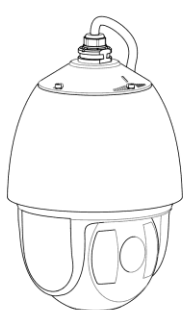



Network Speed Dome


Quick Start Guide

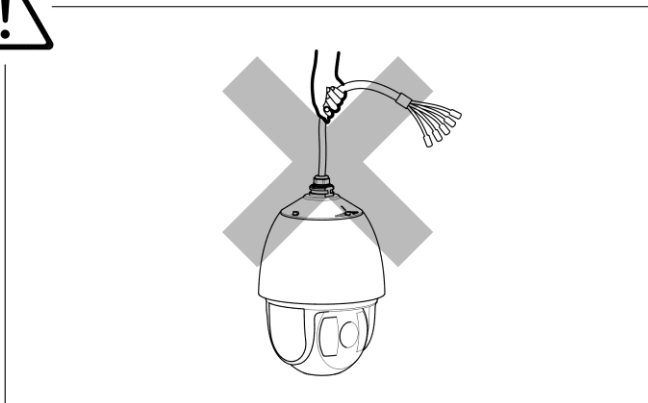


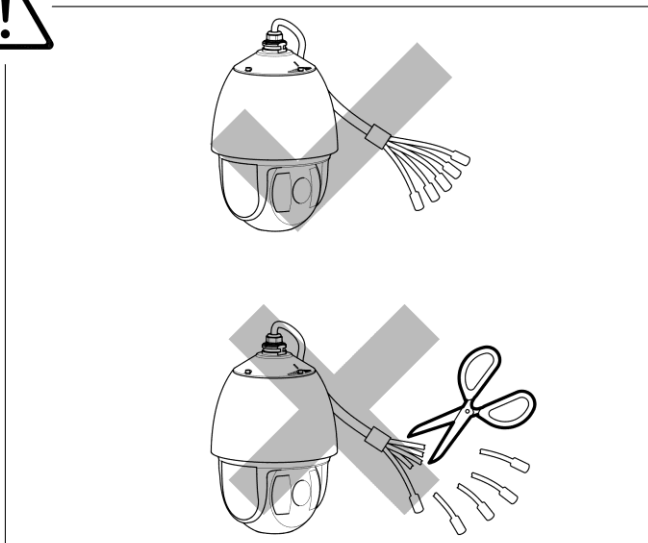


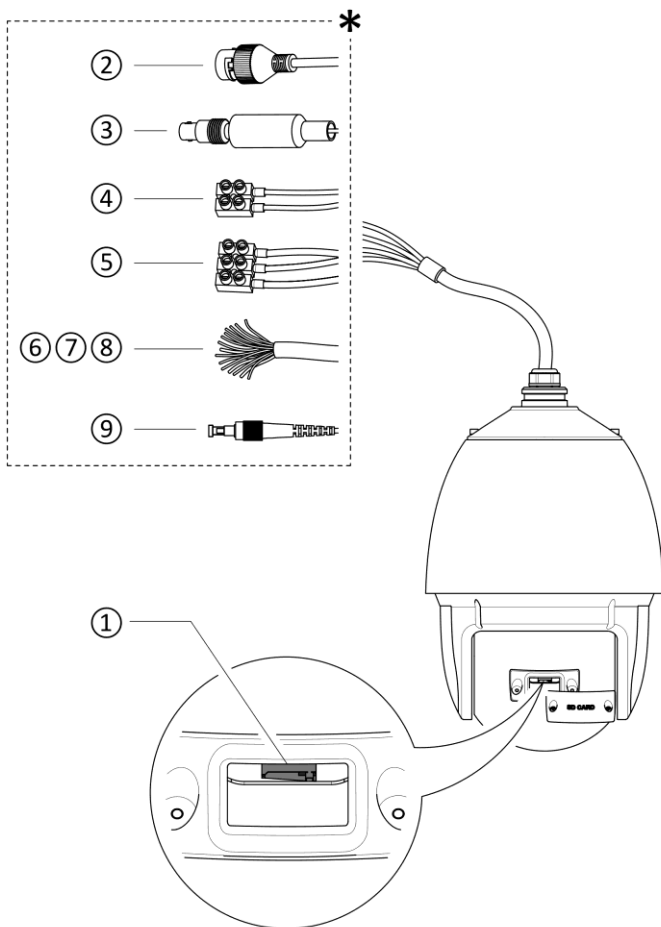


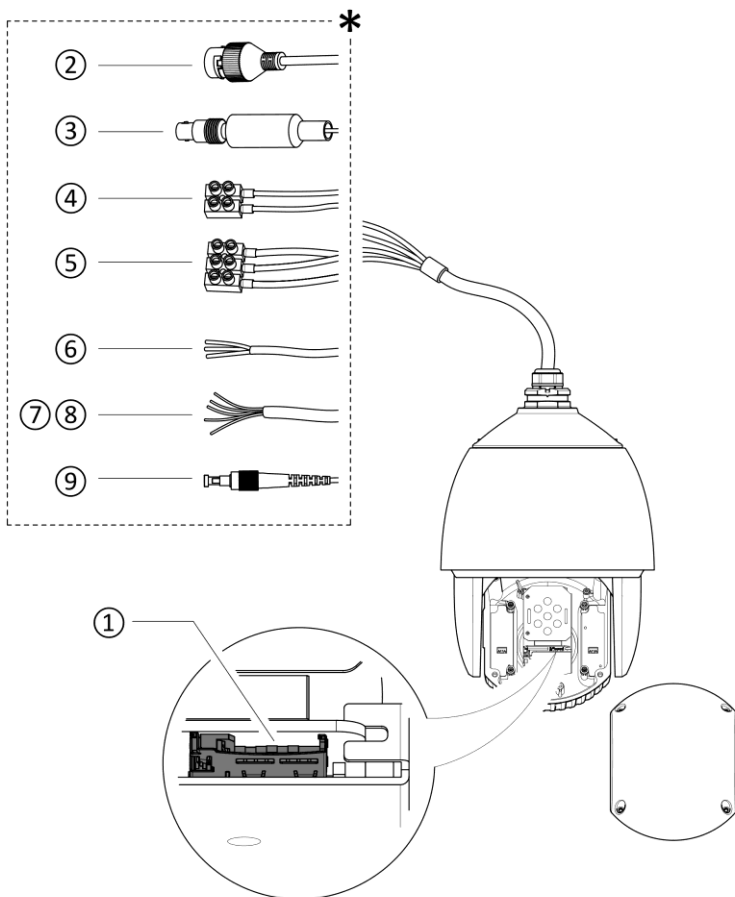



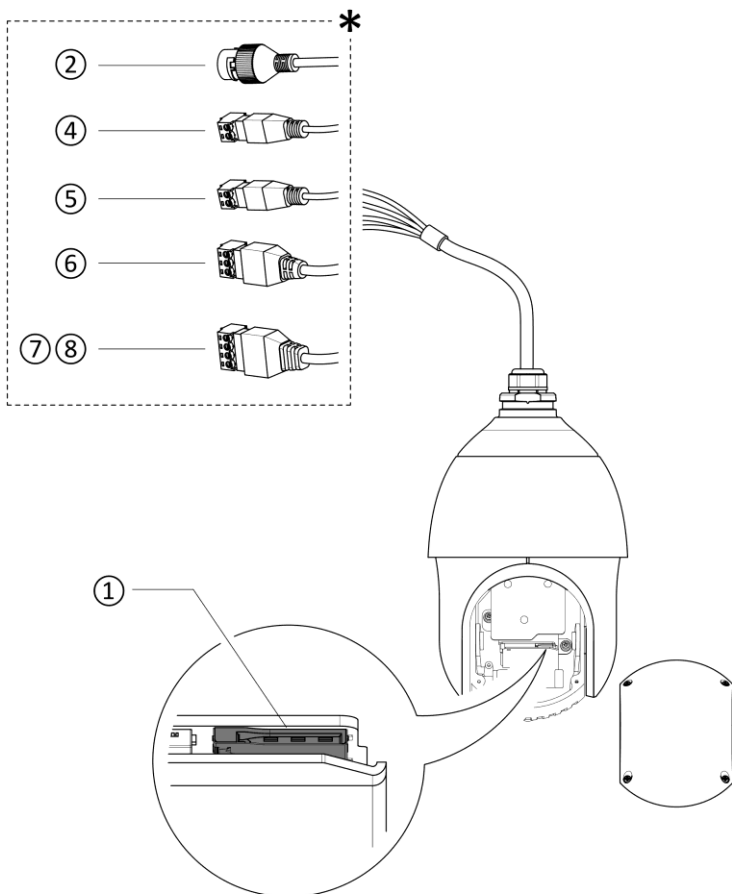



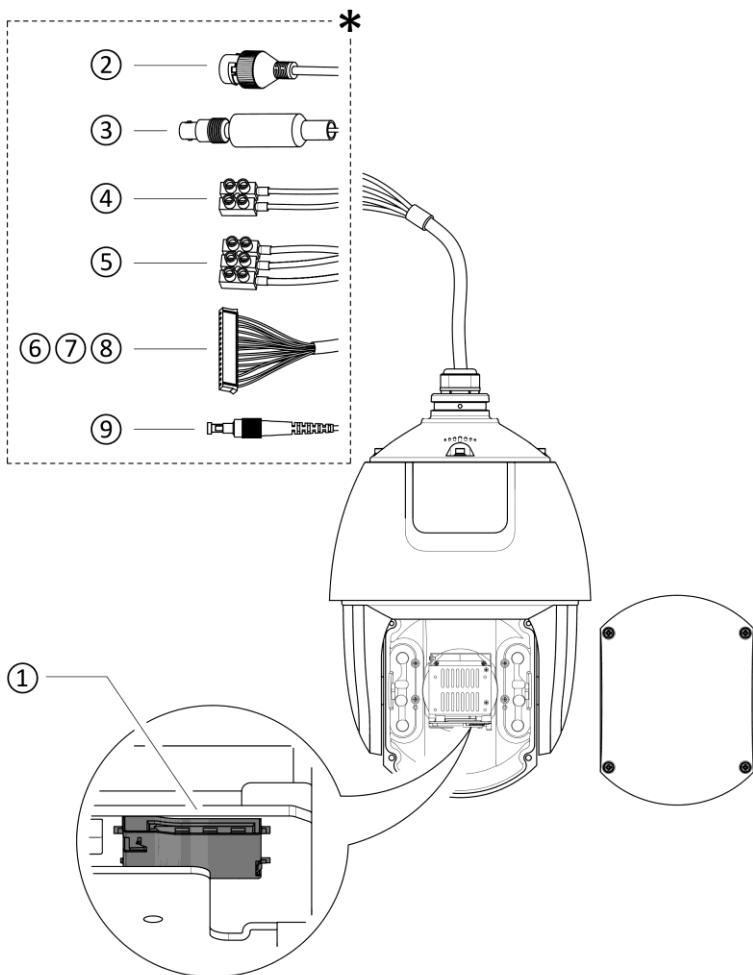





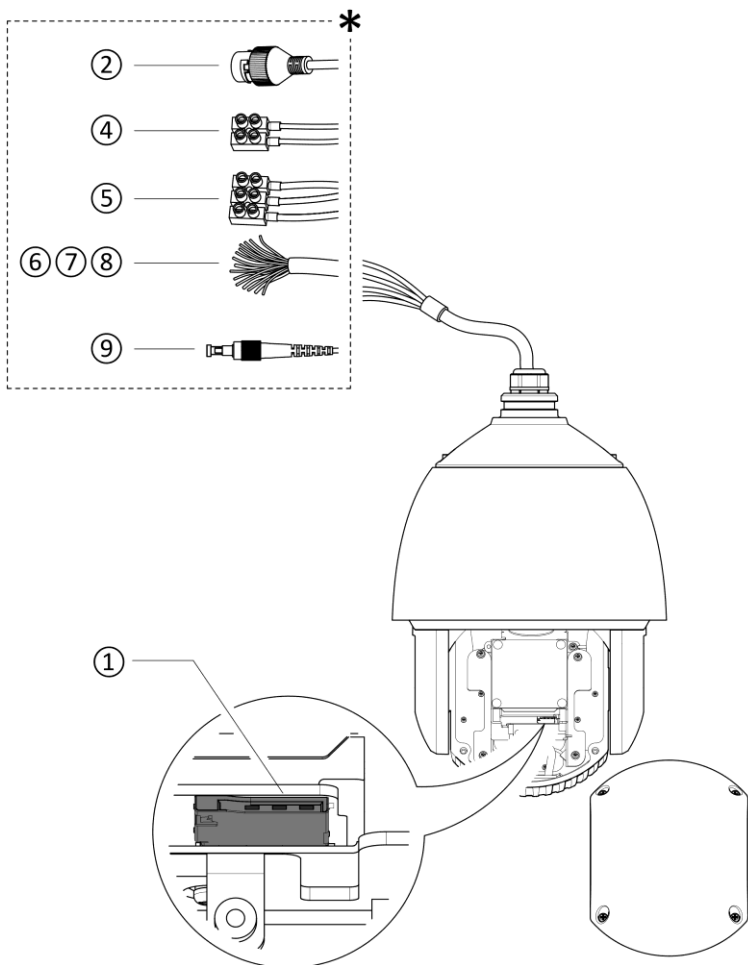


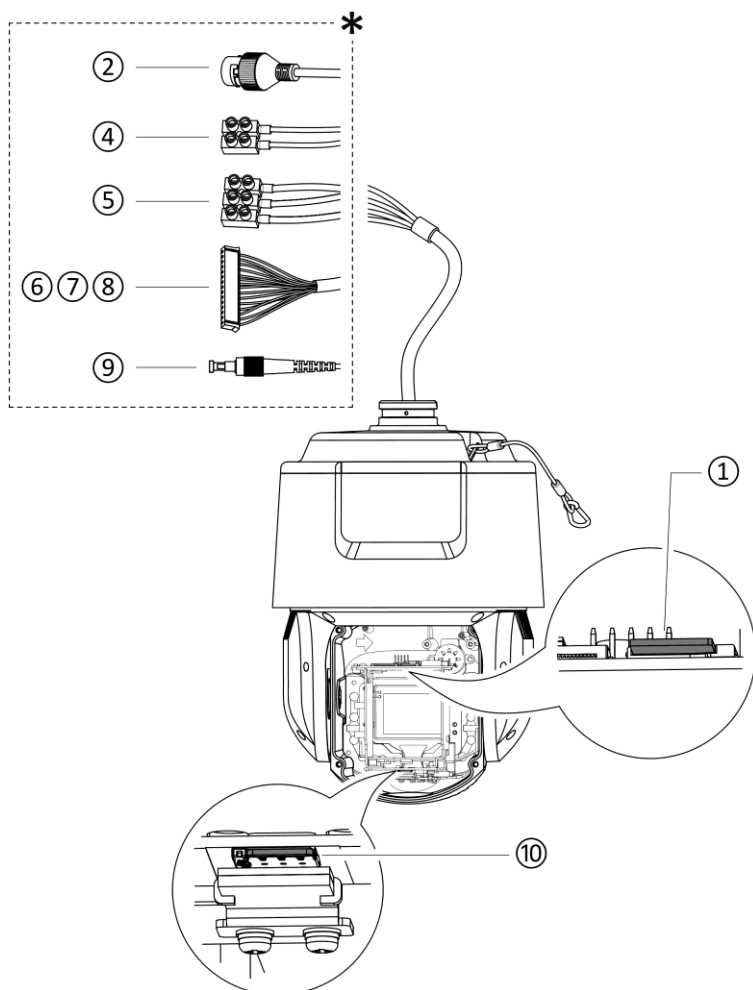


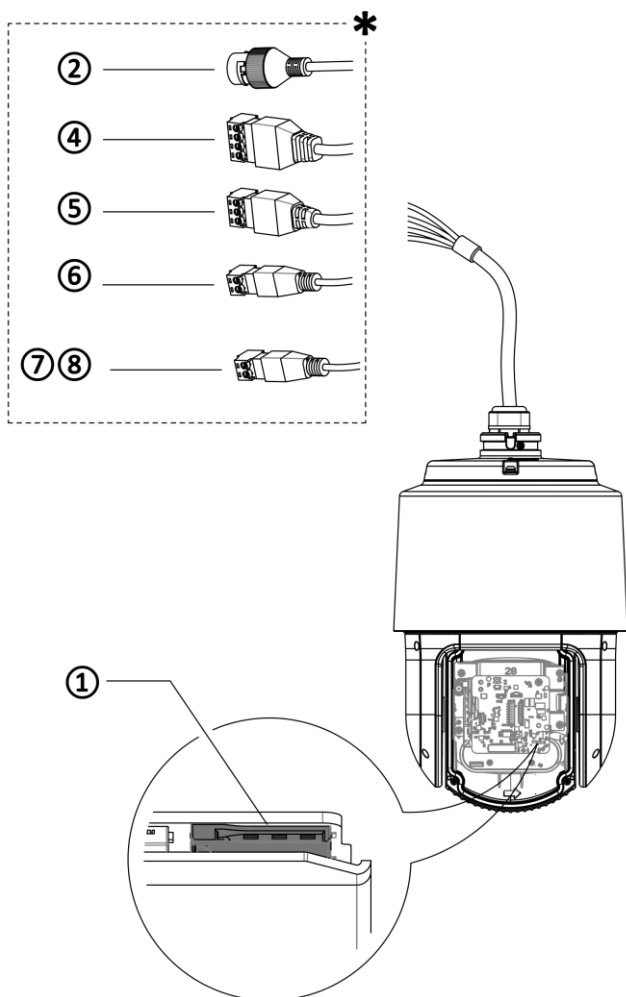

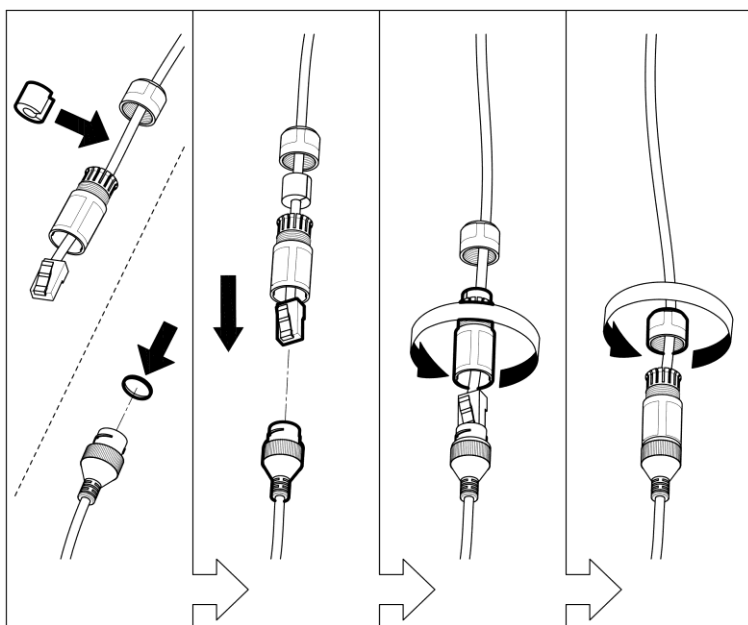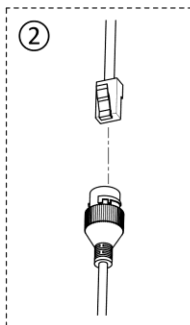


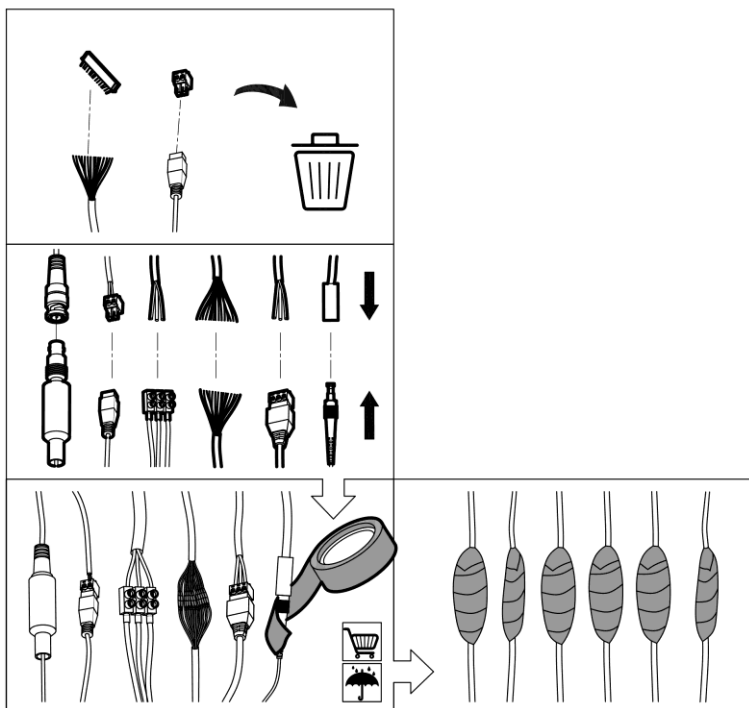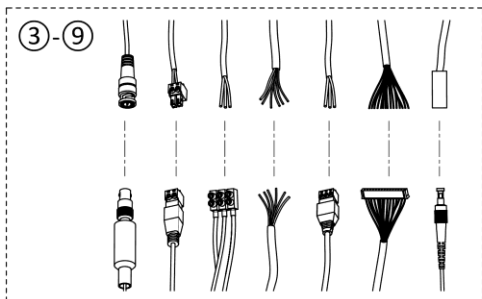

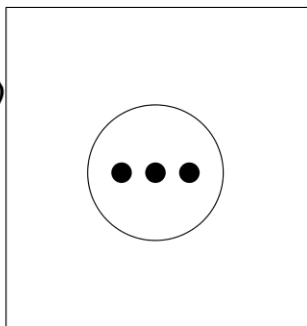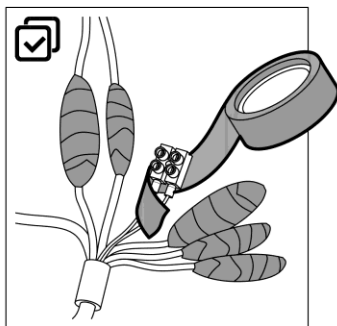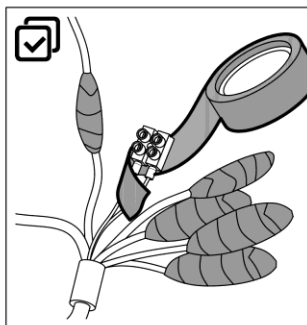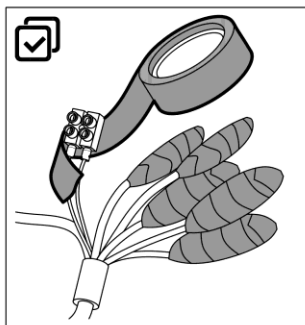


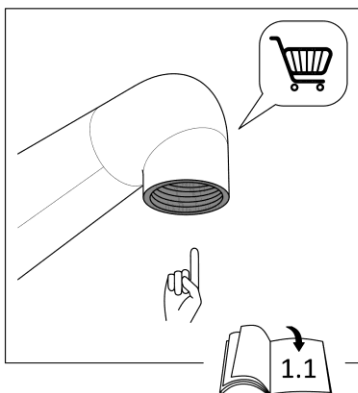


1.1

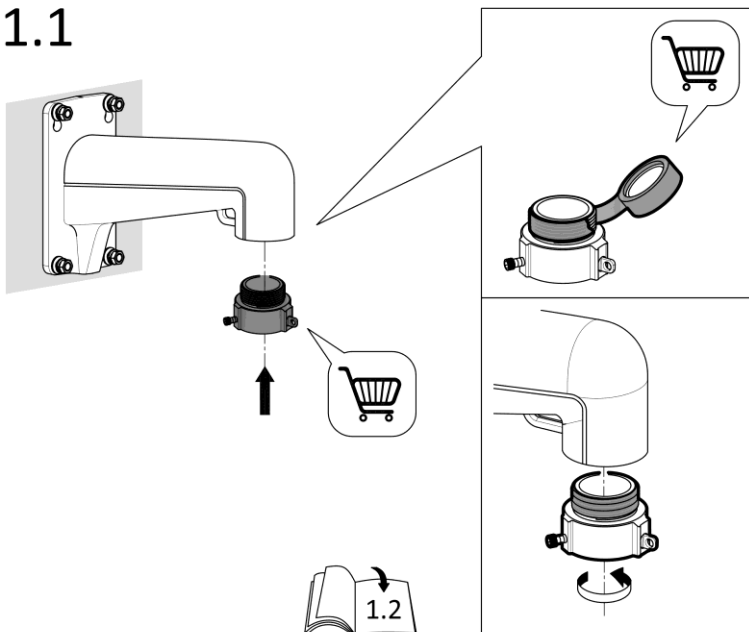


1.2

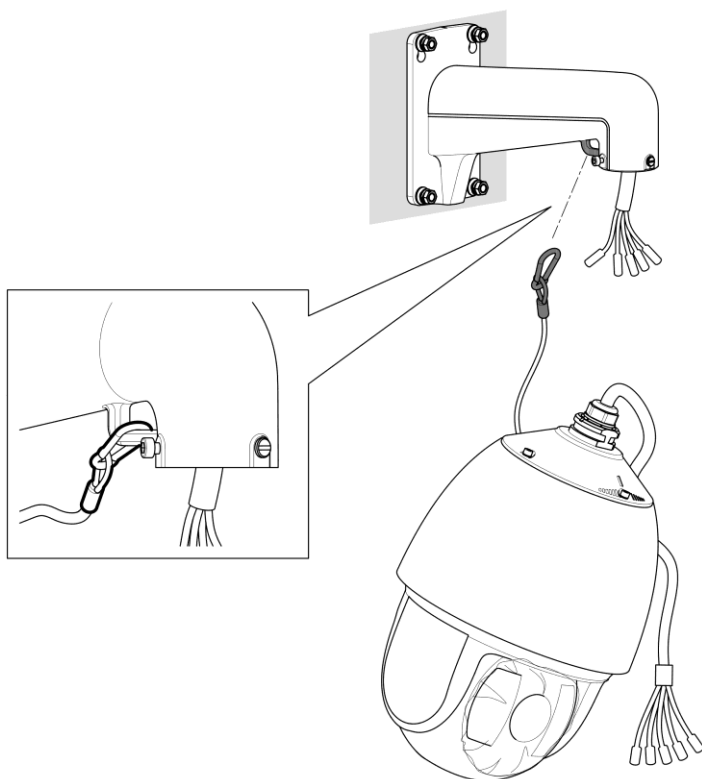

1.3

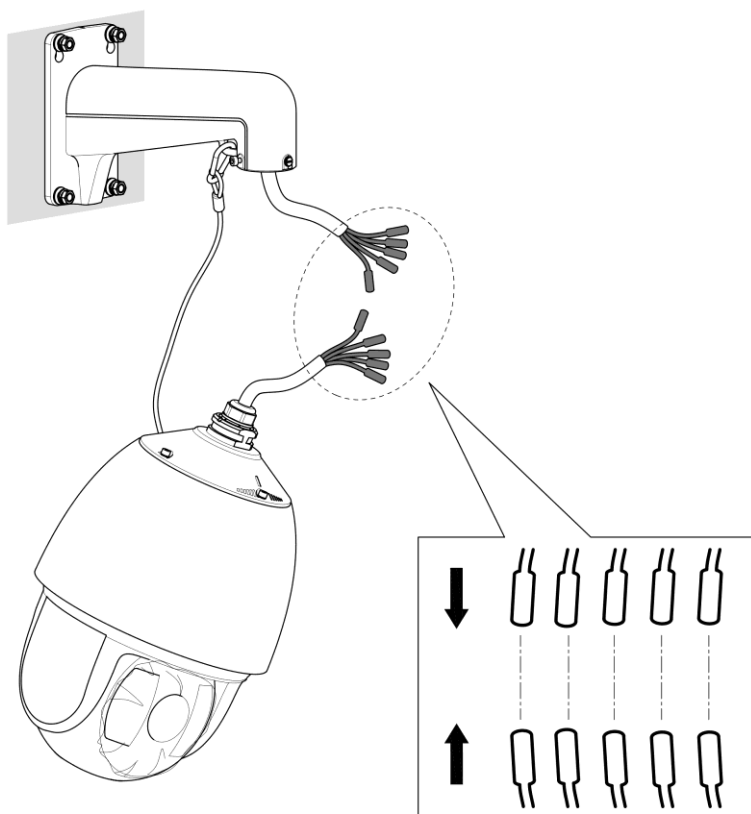

1.4

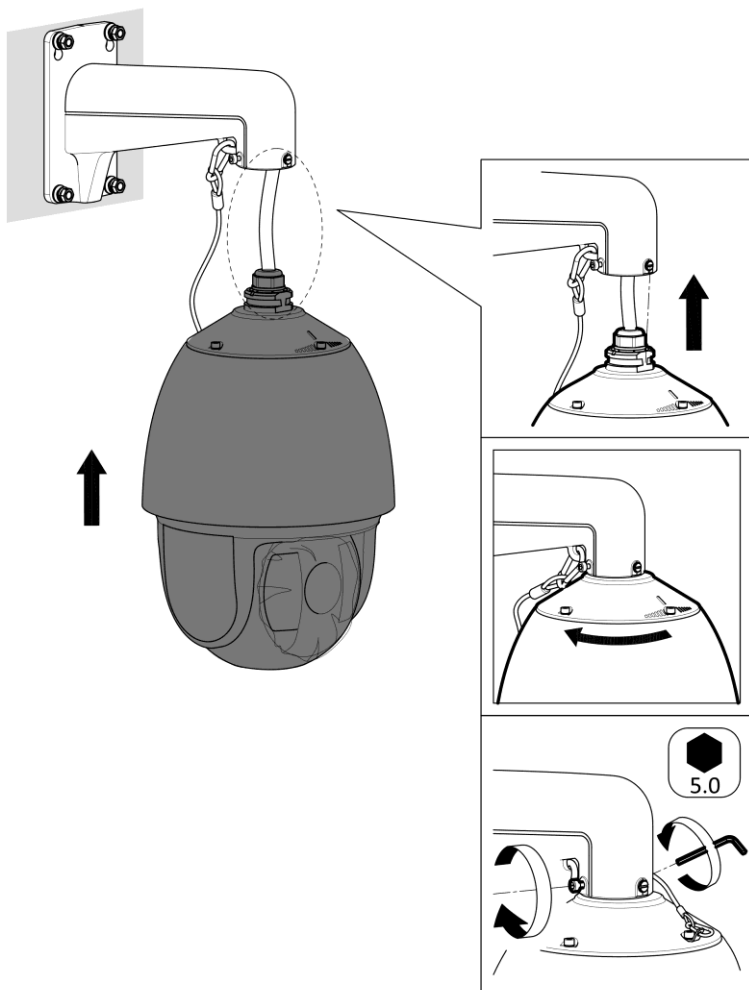

1.5



 Read this manual before using the product.


Product appearance is for reference only and may differ from the actual product.

Interface

- ① Memory card slot
- ② Network interface
- ③ BNC interface
- ④ RS-485 interface
- ⑤ Power interface
- ⑥ Audio interface
- ⑦ Alarm output interface
- ⑧ Alarm input interface
- ⑨ Fiber optical interface
- ⑩ SIM card slot

Note: The interface varies with the models. Please refer to the product datasheet for details.

Alarm Output

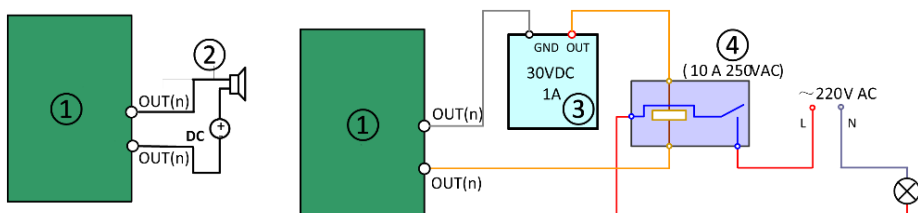

- ① Relay output
- ② DC load
- ③ Power supply
- ④ JQC-3FG Relay



Protective Measures for Outdoor Installation



Activate and Access Network Camera

